

Quick Reference “Daily Cleaning”

Please refer to WMF 1400 User Manual.
Pay special attention to the hazard notices and Safety chapter.



Consider the Overview of Cleaning Interval Schedule in chapter “Customer care” in the User Manual. Prior to the first cleaning read the User Manual, Customer Care chapter under subheading: “General Cleaning”, “Weekly Cleaning” “Regular Cleaning” and “Descaling”.


<p>1</p> <p>Touch clear pad.</p>	<p>2</p> <p>Additional pads are activated. Touch MENU pad.</p>	<p>3</p> <p>Touch (Customer Care).</p>	<p>4</p> <p>The Menu (Customer Care) appears with three options. Touch Cleaning Prog..</p>
<p>5</p> <p>Touch switching off</p>	<p>6</p> <p>Touch Start Cleaning Program sequence begins.</p>	<p>7</p> <p>Open bottle of Special Cleaner. Mix</p> <ul style="list-style-type: none"> • 5 ml cleaner with • 0.3 l warm water in a container. Insert milk hose. 	<p>7.1</p>
<p>8</p> <p>When Step 7 completed touch Yes .</p>	<p>9</p> <p>Cleaning runs for 30 secs.</p>	<p>9.1</p>	<p>10</p> <p>For water rinse fill with 0.3 l of clear, cold water. Insert milk hose. (see 10.1) Touch Yes .</p>
<p>10.1</p>	<p>11</p> <p>Rinse runs for 30 secs.</p>	<p>11.1</p>	<p>12</p> <p>Display with foamer cleaning reminder appears. For foamer cleaning see next page, steps A to C. Touch OK .</p>
<p>13</p> <p>Touch Start Machine cleaning starts.</p>	<p>14</p> <p>Empty Grounds Container and Drip Tray.</p>	<p>14.1</p> <p>Empty grounds container and drip tray. See steps 15 to 18. If not connected to mains drainage place receptacle (2 litres) underneath.</p>	<p>Continue on reverse side.</p>

15



Push combi spout fully upwards and lift the adjustable screen.

16




Remove and empty grounds container.

17




Pull drip tray out and empty. Then replace drip tray. Obligatory with machines without mains drain connection!

18



Replace grounds container and close adjustable screen.

19

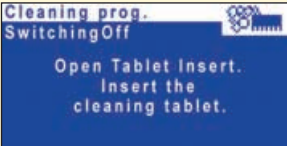


Manual insert is either in the centre between the product containers or in the centre behind the containers.

20




20.1

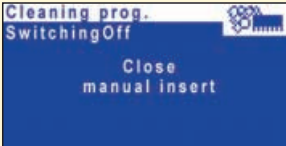


Close manual insert.

21

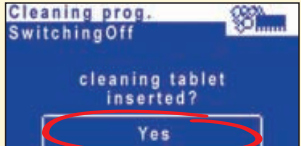

Cleaning tablet inserted? Touch **Yes**

22




Cleaning runs for approx. 5-8 mins

22.1



23

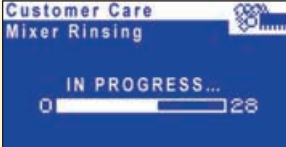


Mixer rinse runs for 30 secs then machine switches off. Cleaning routine ended.

23.1



Combi spout cleaning 1 x daily Prior to cleaning switch off at ON/OFF button. Pull out mains plug.


A



A.1

Pull forward the little lever behind the combi spout. Remove combi spout, remove milk hose from milk container and release from combi spout. If a mixer hose is fitted remove it too.

B



B.1

Mix 5 ml Cleaner with 0.5 l warm water in a receptacle. Dismantle combi spout and soak together with milk hose for a minimum of 5 hrs in the cleaner fluid. Parts must be completely immersed. Finally clean all parts thoroughly with a brush.


C



C.1

Rinse combi spout and milk hose very thoroughly with clear water so that no cleaner fluid remains. Replace combi spout and hoses after rinsing.

Foamer Cleaning

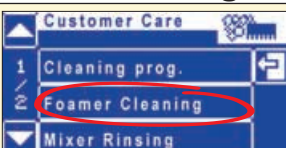

Foamer Cleaning only
On  submenu (Customer Care) touch **Foamer Cleaning** .
See steps 6 to 12.

Mixer Rinsing



Mixer Rinsing only
On  submenu (Customer Care) touch **Mixer Rinsing**
Mixer rinse runs for 30 secs.